



Arkuz BlueNet Power+ Device Installation Guide

Contents

- Arkuz BlueNet Power+ Product Contents.
- Typical Electrical Connections.
- Connecting Arkuz BlueNet Power+ device to your Electrical Loads.
- Your connections to Electrical Load powered by Arkuz BlueNet Power+ device.



Arkuz BlueNet Power+


Product Content

- Arkuz BlueNet Timer Module.
 - The BlueNet Power+ module has
 - Wire set 1: 2 **RED** wires of 2.5mm gauge for Input Supply and a **GREEN** wire of 0.75 mm gauge for Earthing.
 - Wire set 2: 2 **BLACK** wires of 2.5mm gauge for Output Load and a **GREEN** wire of 0.75 mm gauge for Earthing.
 - Wire set 3: 2 **BLUE** wires of . 0.75mm gauge for regular loads.



Typical Electrical Connections

- ✦ 110/220 Volt AC SUPPLY (LINE, NEUTRAL & EARTH).
- ✦ Load is connected to the switch through a voltage stabiliser

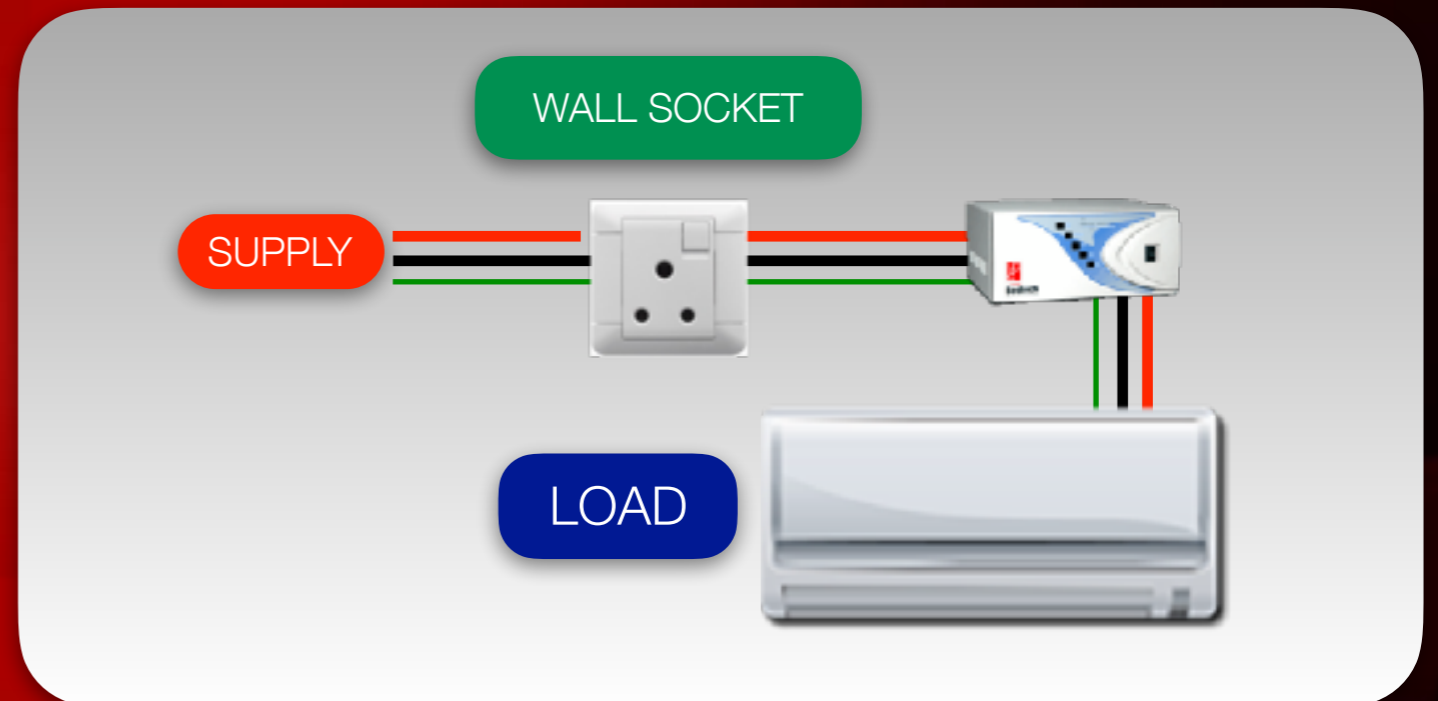

Connecting Arkuz BlueNet Power+ device to your Electrical Loads


- ✦ Items Required
 - ✦ Arkuz Smart BlueNet Timer
 - ✦ Screw Driver
 - ✦ Electric Wire
 - ✦ Duct Tape



Connecting Arkuz BlueNet Power+ device to your Electrical Loads

The installation deals with High Voltage AC current hence take at most caution while installing the Arkuz BlueNet Power+ system. It is highly recommended that any electricity coming to the switchboard panel where the smart light controller is being installed is switched off before starting the installation and be turned back on only after the installation is complete.


- ✦ Step 1
 - ✦ Make sure all power to the wall socket/ load is turned to OFF position.

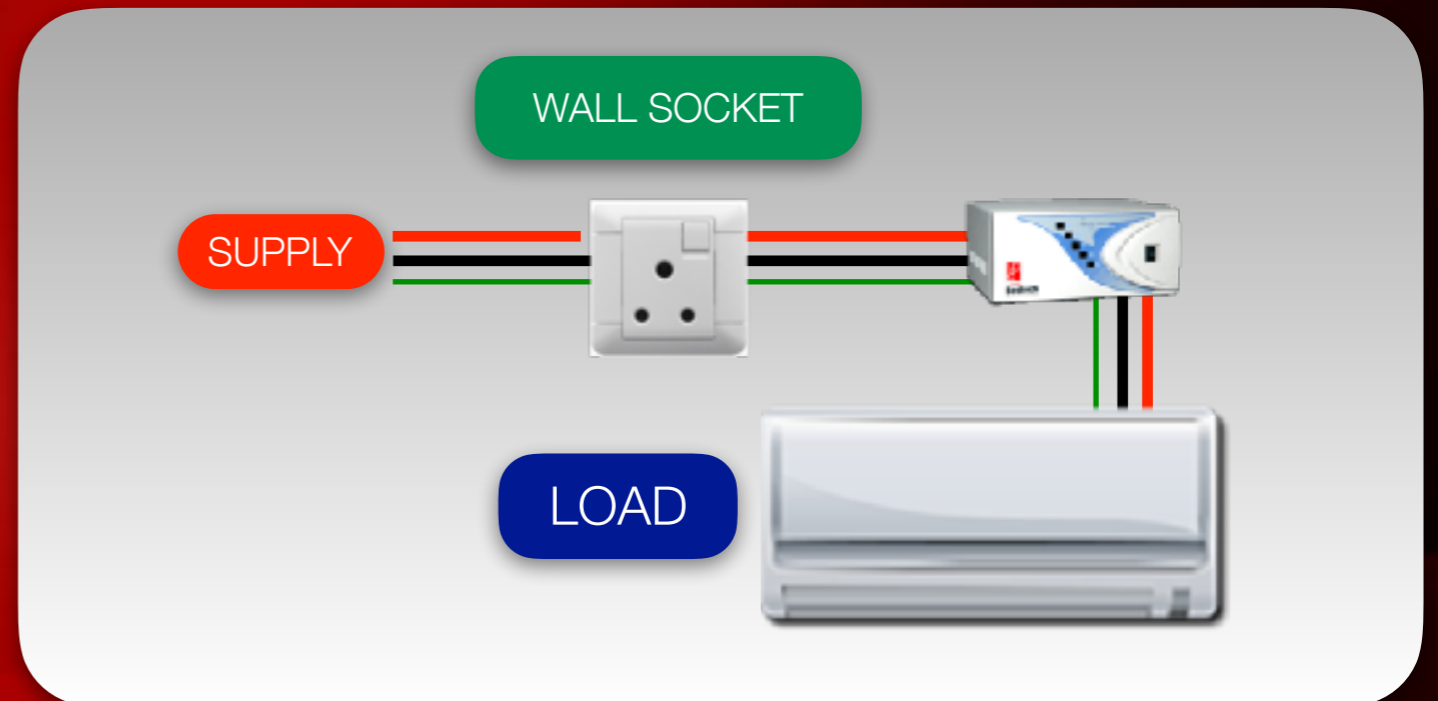

Connecting Arkuz BlueNet Power+ device to your Electrical Loads

✦ Step 2


- ✦ Disconnect Connections between Voltage Stabiliser and the Load.
- ✦ In case Voltage stabilizer is not used then the connection between the wall socket and the Load should be disconnected

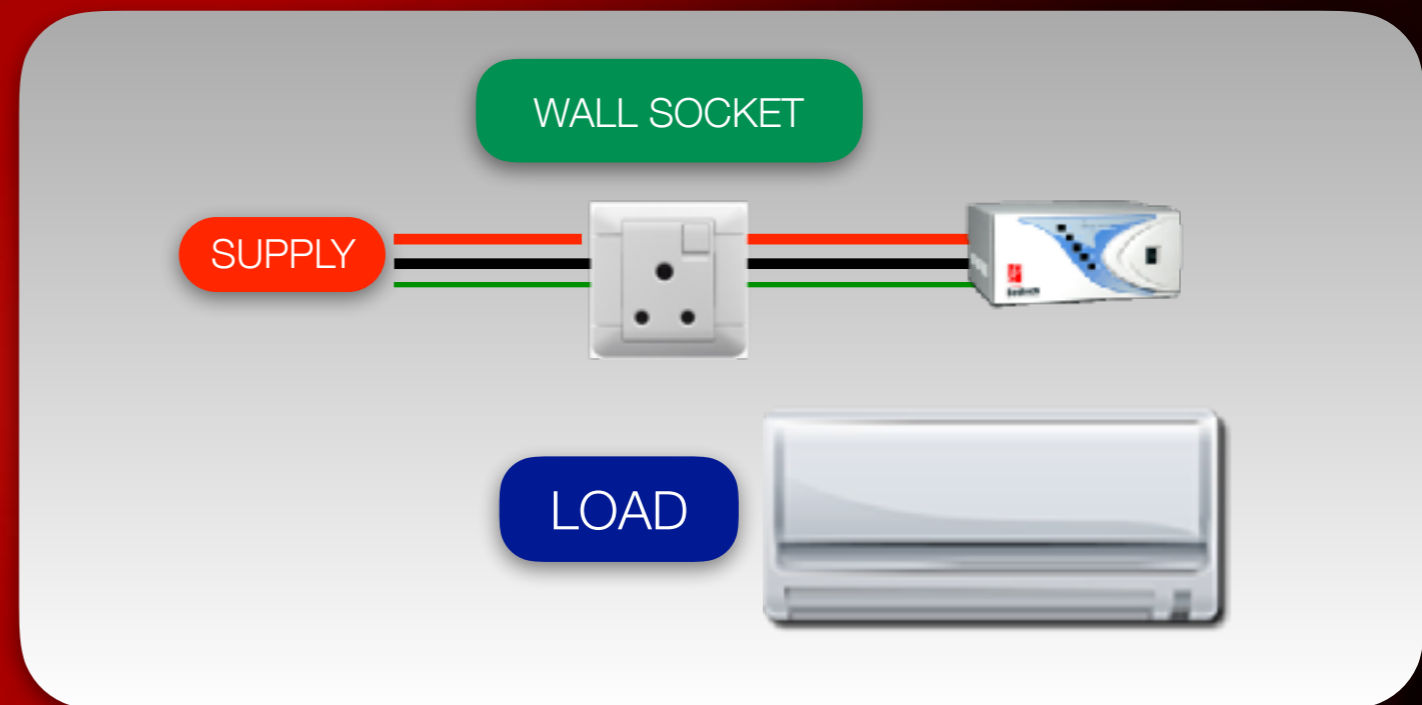


Connecting Arkuz BlueNet Power⁺ device to your Electrical Loads

▪ Step 3

- Connect the **RED** set of wires of Arkuz BlueNet Power⁺ device to the Supply side LINE & NEUTRAL.
- Connect the **BLACK** wire of Arkuz BlueNet Power⁺ device to Load
- The **GREEN** wire of Arkuz BlueNet Power⁺ device need to be connected to the Earth wire of the socket on the Input side and on the Load on the output side.
- The **BLUE**

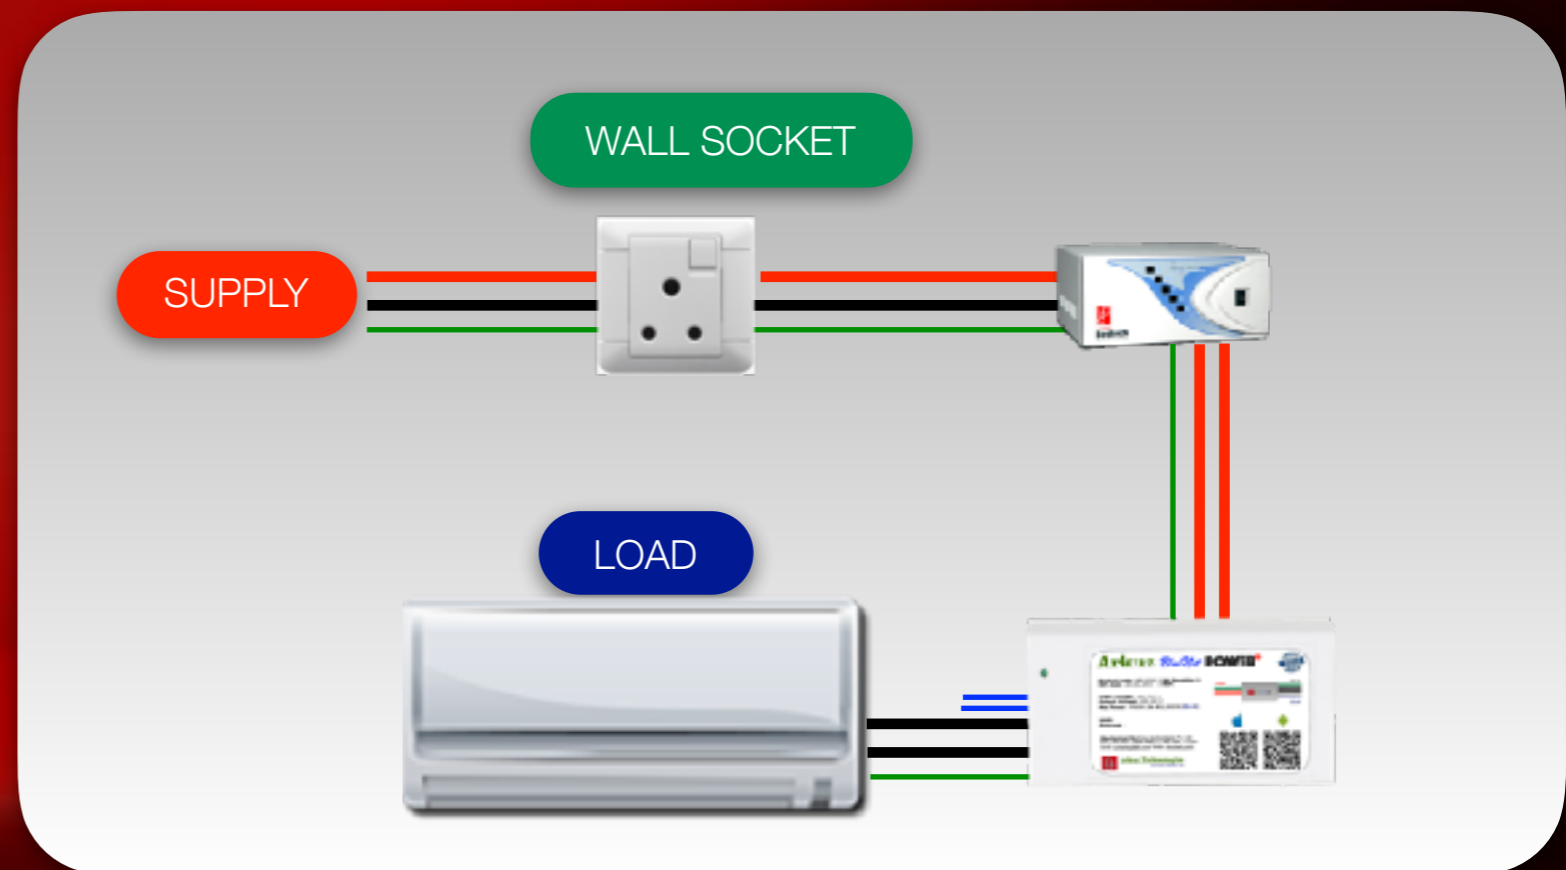

Your connections to Electrical Load powered by Arkuz BlueNet Power⁺ device

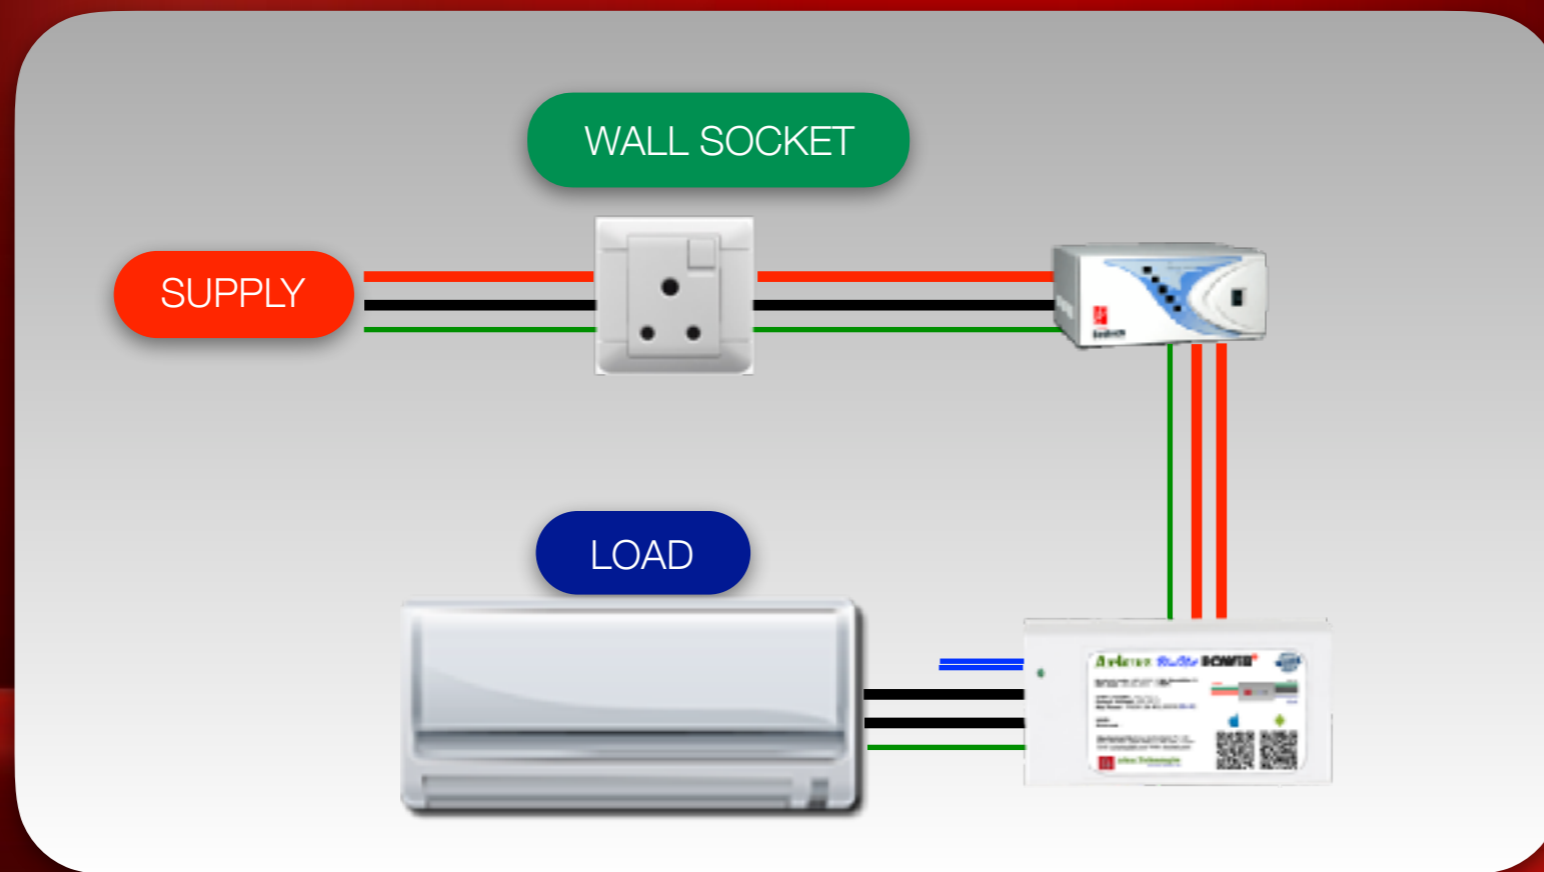



Arkuz Technologies

BEYOND POSSIBILITIES